


microKEYER II and DX4Win Setup

Router setup:

Note: The absolute port numbers do not matter. The key is consistency - the same port number must be used for a specific function every time it is used.

1. Assign the radio control virtual COM port. Click the **Set** button and select the radio from the drop down box. Uncheck the **Disable router queries** box.
2. Assign a port for WinKey
3. Assign the same port for PTT as you used for the Radio.
4. Assign a port for FSK and check the PTT box. If your radio does not support FSK or you will be using AFSK, you can skip this step.

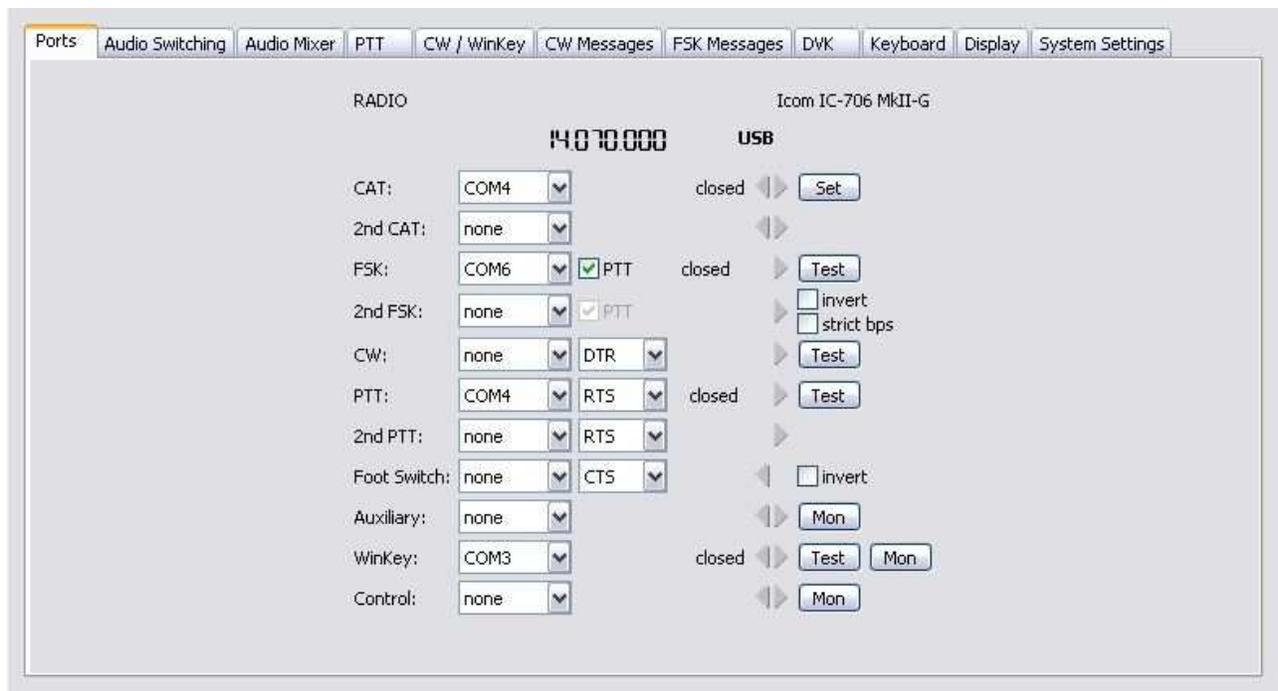

5. On the **PTT** tab, select **PTT1** for Voice, **PTT1 or QSK** for CW and **PTT2** for DIGITAL/FSK.
6. Save the settings to a preset by selecting **Preset | Save as**. Choose a position and name it DX4Win.

DX4Win setup:


1. Click **File | Preferences** to open the Setup Preferences notebook ...

The screenshot shows the 'Setup Parameters' dialog box with the 'Radio' page selected. The 'Radio' section is active, showing the following settings: Type: YaesuFT2000-U8c, Address: 00, Baudrate: 4800. There are checkboxes for 'Default' under both Address and Baudrate. The 'Notes for radio' field contains 'Modified by ON4AOI and K2RD'. The 'COM Port' is set to COM4, Poll rate (ms) is 500, and Max tries is 6. There are checkboxes for 'DTR high' (checked) and 'RTS high' (unchecked). The 'Second Radio' section is also visible, with Type: None, Address: 00, Baudrate: 0, and similar settings for COM Port (COM1), Poll rate (500), and Max tries (6). A vertical sidebar on the right contains buttons for 'Personal', 'Station', 'OSO', 'Screen', 'Import', 'Radio' (highlighted), 'Control', 'CW', 'Packet1', 'Packet2', 'RTTY', 'Ext Data', 'F2 Key', 'DXCC', 'WAS', 'WAZ', 'WPX', and 'Rep/Lab'.

2. Select the Radio page and assign your radio Assign the radio to the virtual COM port you used in Router's Ports tab
3. Set the baudrate required by your radio.
4. For Icom and certain TenTec radios, set the CI-V address.

5. Select the CW page
6. Select WinKey as the CW Device type
7. Set the virtual port you chose for WinKey on Router's Ports tab for the External Keyer.
8. Set the virtual port you chose for Control and PTT on Router's Ports tab for PTT control. Select PTT control for the RTS line.

The screenshot shows the 'Setup Parameters' dialog box with the 'CW' page selected. The 'Device type' is set to WinKey and 'Radio 1/2 signal' is set to None. The 'Software CW keying / PTT control' section shows: Interface: COM4, PTT delay: 10, DTR line: None, and RTS line: PTT control. The 'External keyer' section shows Port: COM3. The same vertical sidebar from the previous screenshot is visible on the right, with 'CW' highlighted.

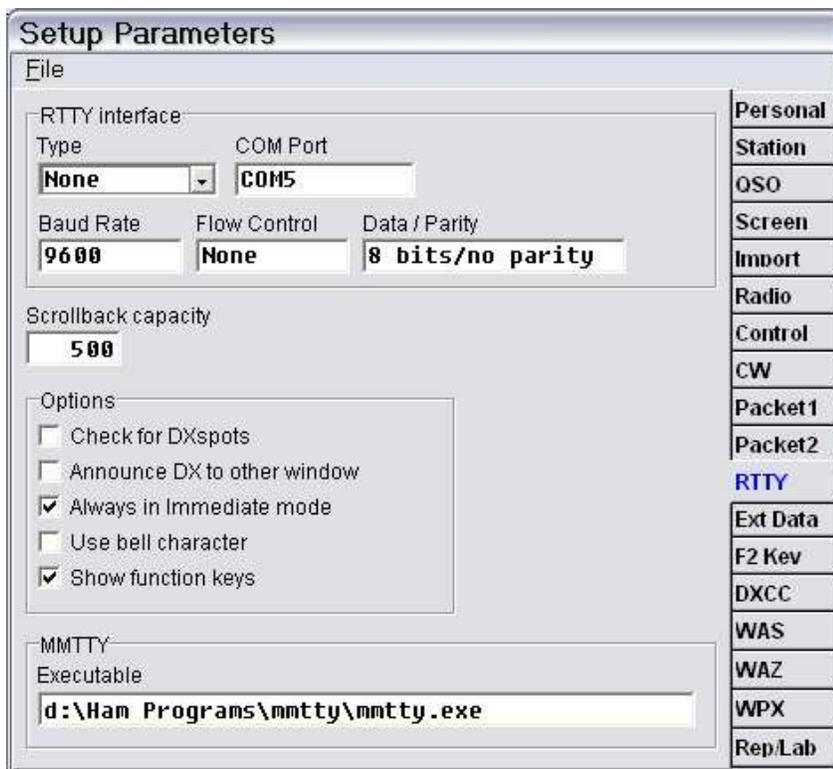


9. Select the RTTY page.


10. Enter the path to the MMTTY Executable file.

11. Select the Control page.

12. Select the **PSK sound card**.

To obtain the proper card number, click the **Get ID** button on Router's **Audio Mixer** tab and use the **Mixer ID**.

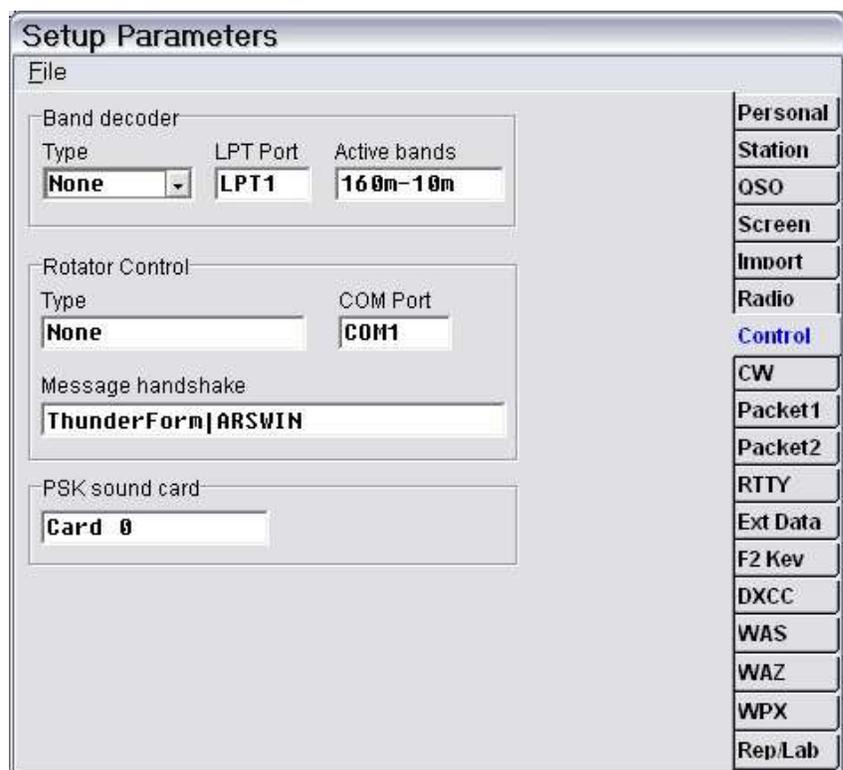

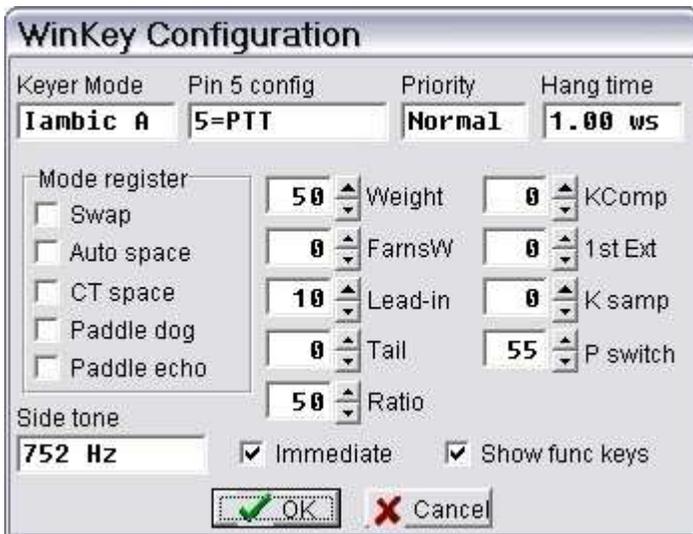

13. Open the CW Keyboard (ALT-K)

14. Open the CW Keyboard settings (ALTS)


15. Configure the settings you prefer for CW operation including weight, PTT or QSK operation, etc.

It is generally most convenient to make the CW parameters the same as you have set on Router's CW/WinKey tab.

16. Open the PSK31 window (ALT-3)

17. Open the PSK31 settings (ALT-S)

18. Select the TX tab and set PTT to "PTT control"

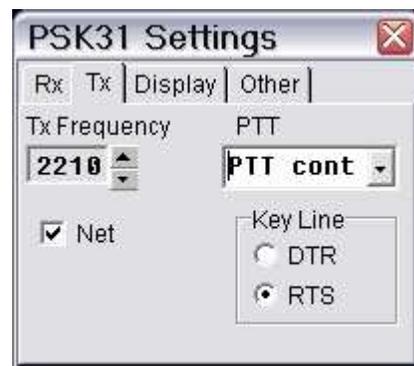

MMTTY setup:


If you plan to operate FSK with the MMTTY window you will need to first configure MMTTY in stand-alone mode.


19. Open MMTTY from the Start menu.

20. Select **Options | Setup MMTTY.**

21. Select the TX Tab

22. Choose the FSK port you set on Router's Ports tab for the PTT Port.

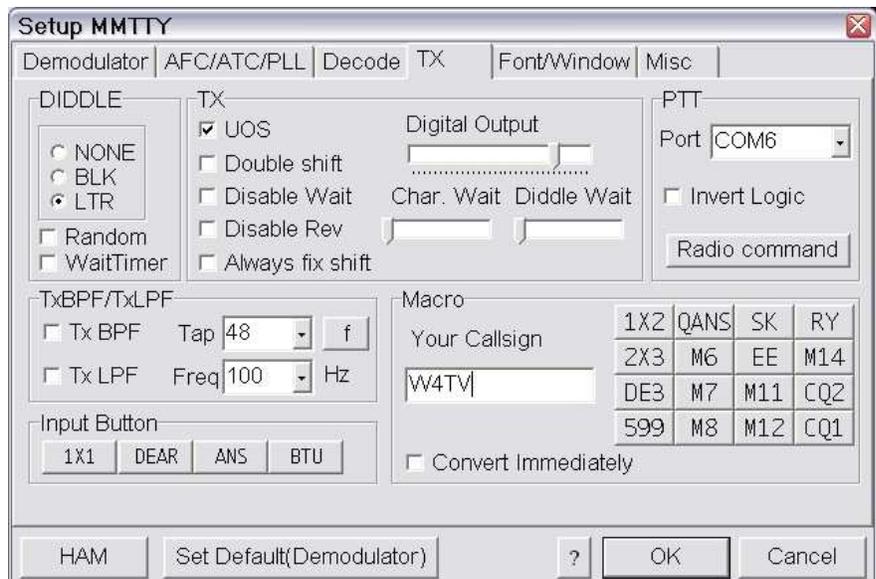

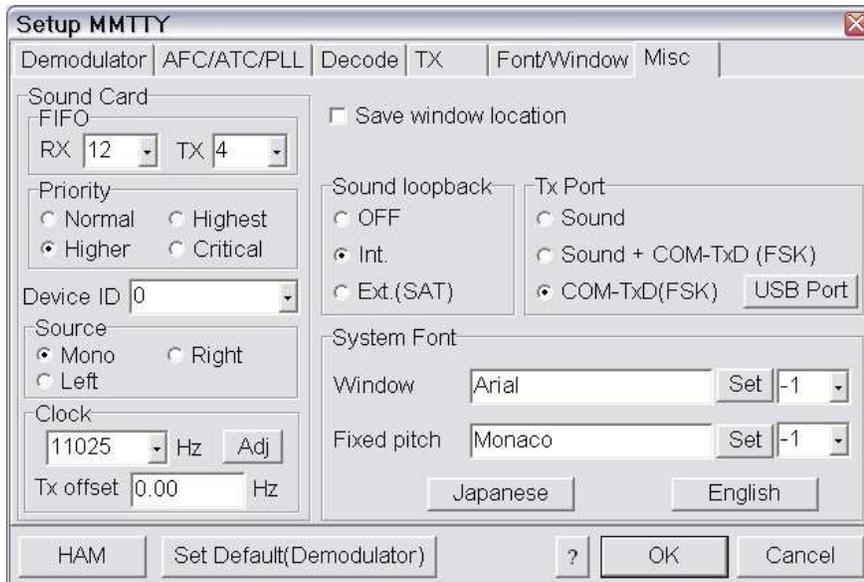

23. Choose the **Misc Tab**.

24. Select **Source Mono**

25. Select clock **11025**

26. Select the proper Sound card **Device ID** number.

To obtain the proper ID, click the **Get ID** button on Router's **Audio Mixer** tab.

27. Select COM-TxD (FSK) for the TX Port. If you want the option to switch between AFSK and FSK, select Sound + COM-TxD (FSK)

28. Click **USB port** button and choose **C: Limiting speed**

29. Close MMTTY

30. Start DX4Win and open the MMTTY Window

31. Open the MMTTY Window Keying Settings (ALTS)



32. Select "PTT control" and RTS

